

# INSTALLATION INSTRUCTIONS

**AQUASCAPE**  
AUSTRALIA

## COMPACT WATER FILL VALVE (ITEM #88006)



### CARE AND MAINTENANCE

- Once set to the desired water level, the Compact Water Fill Valve requires little additional maintenance. Periodically inspect the Compact Water Fill Valve to make sure it is functioning properly.
- Regular pond and filter maintenance, such as removing and cleaning debris baskets and filter mats will help the Compact Water Fill Valve operate accurately.


### ADJUSTING THE WATER FILL VALVE

- Initial positioning of fill valve arm can be made by loosening thumb screw and wing nut found on the axle of the fill valve arm and adjusting the angle of the arm.
- Final adjustments of the fill valve should be made while the pump is operating and the water in the pond is at the desired level.


### PACKAGE INCLUDES:

- 1 x Compact Fill Valve
- 1 x 1/4" Fitting for Poly-Pipe


### INSTALLING THE COMPACT WATER FILL VALVE

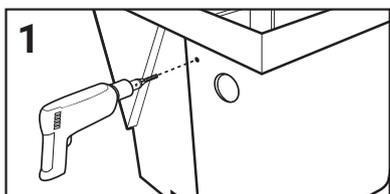


1 Drill a 19mm hole in side wall of skimmer, Pondless® Waterfall Vault, or decorative basin. Exact location for the water fill valve will be different for each unit. Fill valve location should be 25mm above the desired water level.

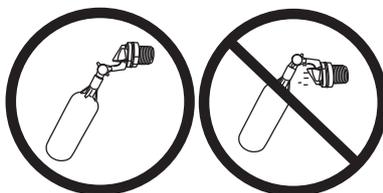


**NOTE:** Correctly orient water fill valve pointing down. Do not orient valve in the upright position.

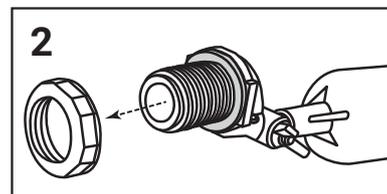


2 Remove hex nut from threaded end of fill valve, leaving only the rubber washer on.

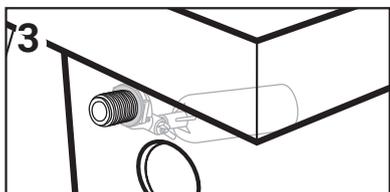

3 Insert threaded end of fill valve through the 19mm hole drilled in the side wall of unit. **Note:** Rubber washer must be located on the inside wall.

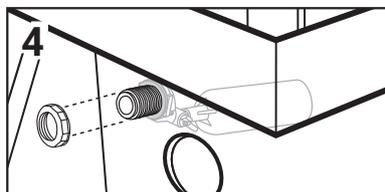

4 Tighten hex nut, securing the fill valve to the unit.

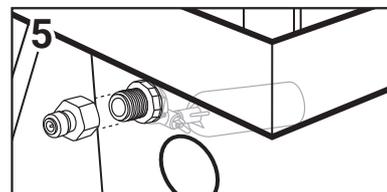


5 Attach Fitting into the Fill Valve, making sure that it's tight.


### PLUMBING OPTIONS

(Tap Fitting & Poly Pipe not included)


#### Poly-Pipe/PVC Installation

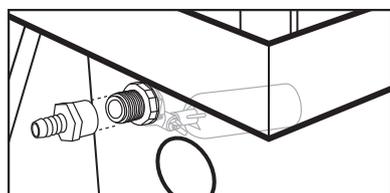

If using poly-pipe or PVC, thread the desired fitting onto the other end of the fill valve

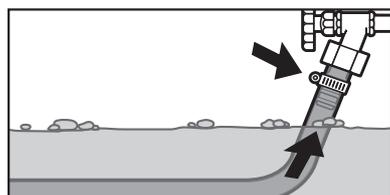

Trench 13mm poly-pipe irrigation line to water spigot and connect using a brass garden hose adaptor (not included), or connect to existing irrigation line. The irrigation line can be buried a few inches below the surface of the soil.

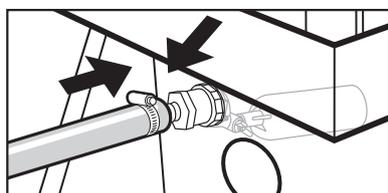


Connect 13mm irrigation line to barbed fitting and tighten with hose clamp provided in the water fill valve kit.




**Auto Fill Poly Pipe -  
1/4" Cut to length per metre**

#29350C

#### Garden Hose Installation

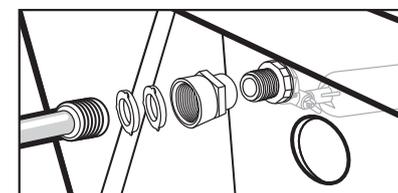

If connecting to a garden hose, thread 13mm end of the female garden hose adapter (included) to the other side of fill valve. Insert the (2) rubber gaskets into 19mm end of adapter and attach garden hose.

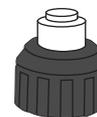

**Auto Fill Valve 1/4" Tap Fitting**

NC2145